

## BLUETOOTH® HANDSFREELINK® (HFL)

Place and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if your phone is compatible.

**To reduce the potential for driver distraction, certain manual and touch screen functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.**

### How to Use HFL



**Pick-Up button:** Answer an incoming call or go directly to the Phone screen.



**Hang-Up/Back button:** End a call, decline an incoming call, or cancel a selection.



**Talk button:** Give HFL commands.



Use these buttons to navigate through the HFL menus.

**Joystick/ENTER button:** Move up, down, left, or right to scroll options, and press to make a selection.



**PHONE button:** Go directly to the Phone screen.

**CANCEL button:** Press to cancel an operation or return to the previous screen.

### Pairing Your Phone

Use this pairing method when no phone has ever been paired to the system. You can pair your compatible phone only when the vehicle is stopped.

 
 
Press and release the Talk button before you say a command.

1. Press PHONE to go to the Phone screen. A prompt appears. Say "Yes."
2. Make sure your phone is in discovery mode. Say "OK."
3. HFL searches for your phone. Say the number next to the phone when it appears on the list.

*If your phone does not appear:*

Say "Find another phone," and search for HandsFreeLink from your phone. Connect to HFL.

4. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.



Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

Press and release the Talk button before you say a command.

1. Press PHONE to go to the Phone screen. If a prompt appears asking to connect to a phone, say "No."
2. Say "Phone setup."
3. Say "Bluetooth setup add select a phone."
4. Say "Search."
5. Make sure your phone is in discovery mode. Say "OK."
6. HFL searches for your phone. Say the number next to the phone when it appears on the list.

*If your phone does not appear:*

Say "Find Another Phone," and search for HandsFreeLink from your phone. Connect to HFL.

7. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.



### Dialing a Number

Enter a 10-digit phone number to call.

Press and release the Talk button before you say a command.

1. Press PHONE to go to the Phone screen.
2. Say "Dial."
3. Say the entire phone number. For example, "3-1-0-5-5-1-2-3-4."
4. Say "Dial" to begin the call.



**Note:** You can also say "Dial by number," followed by the phone number and "Dial" from any screen.

### Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Press and release the Talk button before you say a command.

1. Press PHONE to go to the Phone screen.
2. Say "Phonebook."
3. Scroll through the list to find the name and number you want.
4. Say "Call" to begin the call.




### Using Speed Dial

Store up to 15 numbers for quick calling. See your Navigation Manual for instructions on storing voice tags.

Press and release the Talk button before you say a command.


1. Press PHONE to go to the Phone screen.
2. Say "Speed Dial 1" (or "Speed Dial 2") and the number next to the entry. For example, "One."
3. Say "Call" to begin the call.

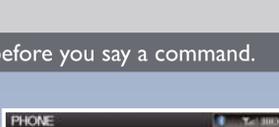

**Note:** If an entry has a stored voice tag, you can say "Dial by voice tag," followed by the voice tag name and "Dial" from any screen.

### Receiving a Call

A notification is heard and the following screen appears:

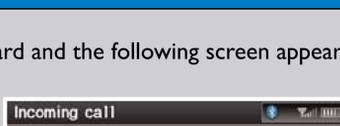

Press the (Pick-Up) button to answer the call.



Press the (Hang-Up) button to end or decline the call.



### Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
<b>HFL System (Without Navigation)</b>	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
<b>HFL System (With Navigation)</b>	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted