


## Removal and Installation of Lock Cylinder

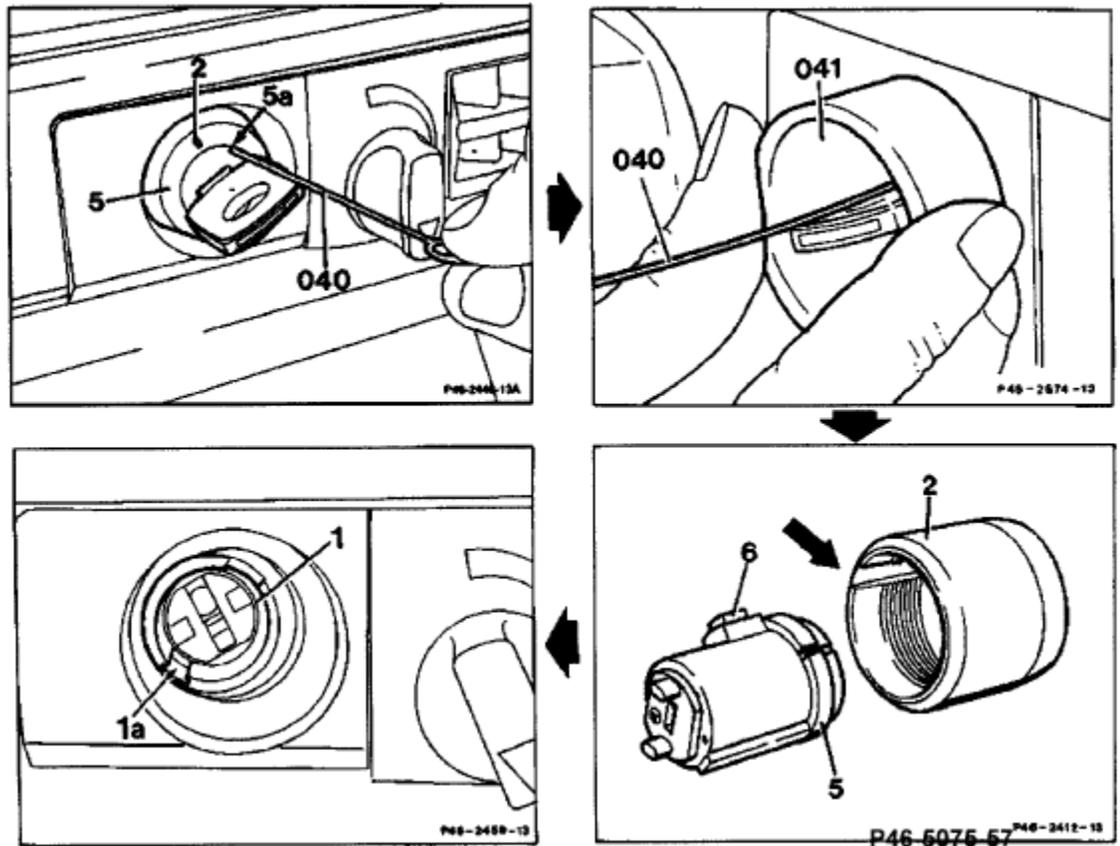


1. Turn lock cylinder (5) to position "1". Press release wire (040) into hole (5a) to stop until retaining catch is released.
2. Screw cover (2) off with sleeve (041) 126 589 07 14 00, screw on, remove from steering wheel lock together with lock cylinder (5). Pull release wire (040) out of lock cylinder (5) and turn ignition key to position "0", remove. When installing position steering wheel lock (1) so that high spot on lock cylinder (5) engages in groove (1a) in steering wheel lock (1).
3. Remove lock cylinder (5), when installing insert into cover (2) so that safety catch (6) engages in groove in cover (2). Insert ignition key and turn to position "1", push release wire (040) into hole (5a) and release retaining catch.
4. Check lock cylinder (5) for proper function.

## Removal and Installation of Complete Steering Wheel Lock


Preliminary work:

- Steering wheel removed.
- Instrument cluster removed.
- Cover below instrument panel removed.

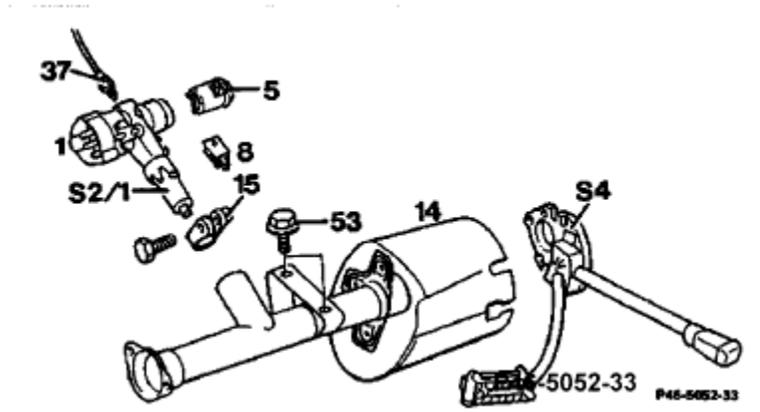


### Removal, Installation


1. Remove combination switch (54-310)

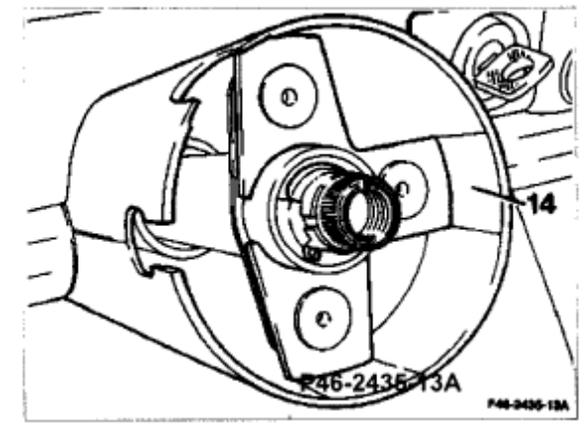


2. Remove cover (14) on jacket tube.

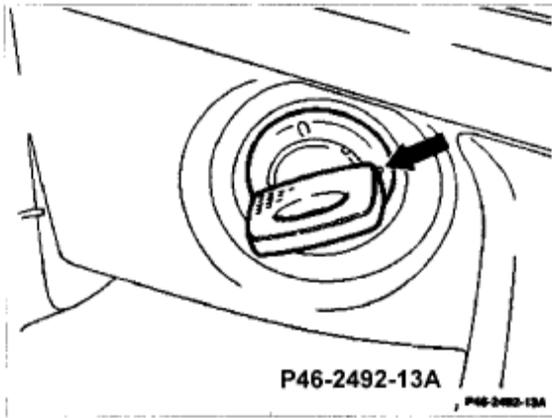

3. Turn lock cylinder to position "1" (**arrow**).

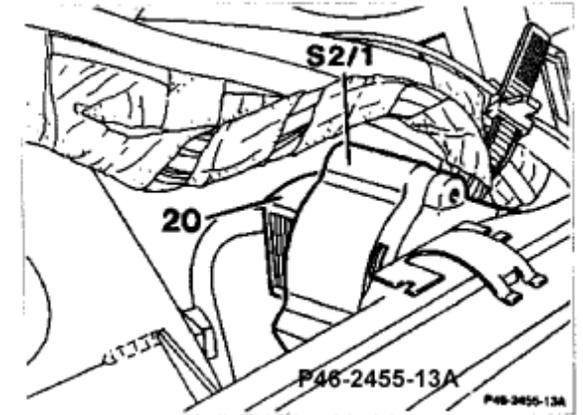


4. Disconnect plug connector (**20**) on ignition/starter switch (**S2/1**).

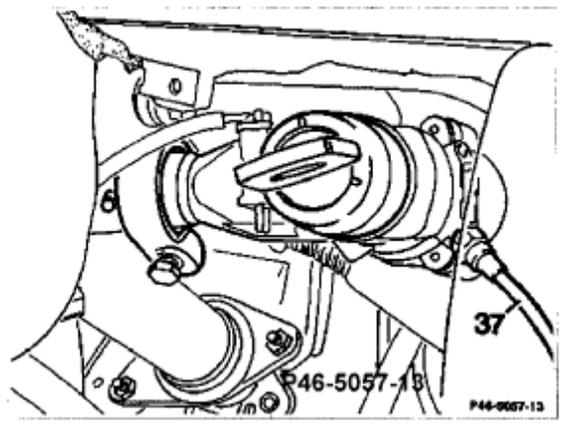


5. On vehicles with parking position key-lock screw control cable (37) oft of steering wheel lock.
6. Remove lock cylinder.


**CAUTION:** The bottom steering spindle (corrugated tube) is extremely sensitive to lateral forces; for this reason move jacket tube out of position carefully and as little as possible.

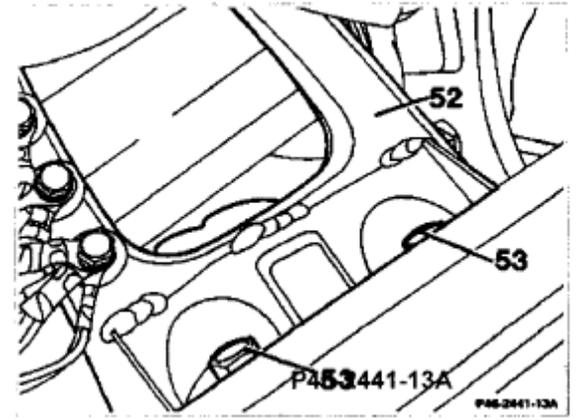


7. Loosen hex. head bolts (53 ) on upper mount (52 ) for jacket tube. Pull jacket tube downward slightly to remove and install steering wheel lock.

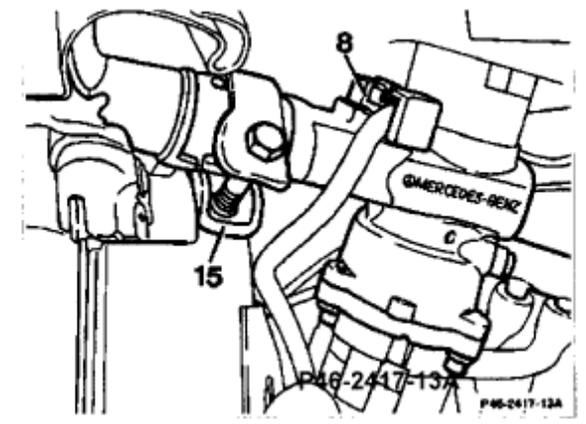


8. Loosen mounting clamp (15 ). Disconnect plug connector on contact switch (8 ).

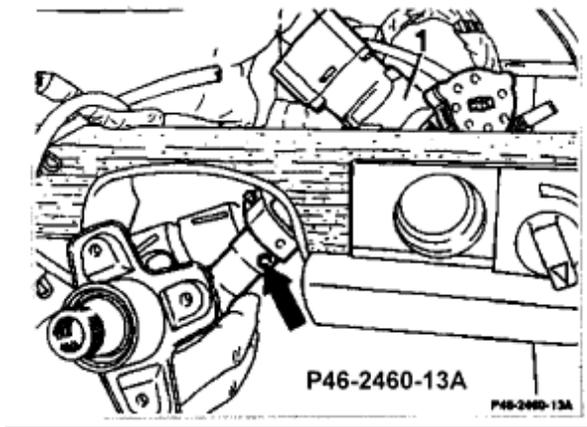

9. Press arresting pin (**arrow**) in. Pull steering wheel lock (**1**) slightly out of mount in jacket tube, turn and remove completely from mount in jacket tube.

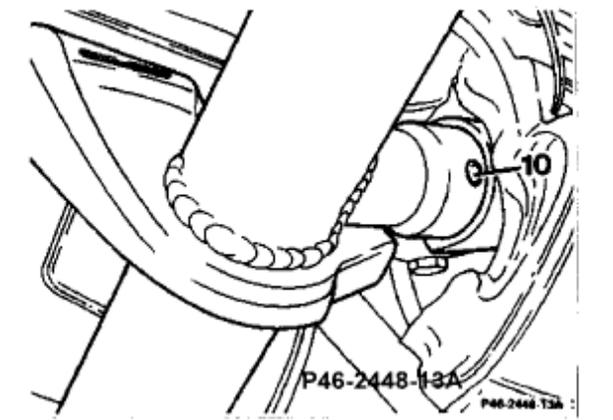

**Installation note:** Insert steering wheel lock into mount in jacket tube. Turn lock until arresting pin (**10**) engages in hole in mount.

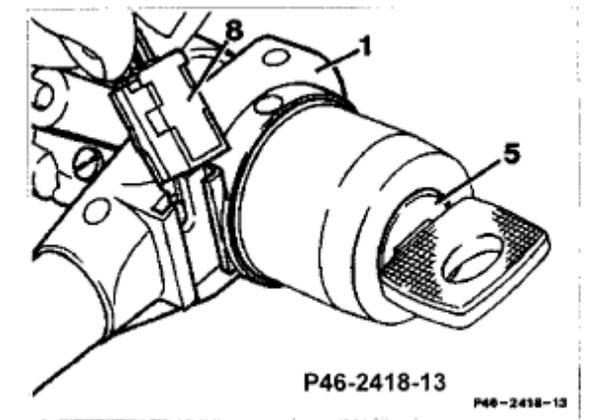

10. Insert lock cylinder (5), turn to position "1" and remove contact switch (8) from steering wheel lock (1).