REMOVAL AND INSTALLATION: MULTIFUNCTION SWITCH (STEERING COLUMN SWITCHES) Procedure SGML ID: N130593

SECTION 211-05: Steering Column Switches 2000 Expedition/Navigator Workshop Manual

REMOVAL AND INSTALLATION Procedure revision date: 06/17/1999

Multifunction Switch

Removal

1. Disconnect the battery ground cable (14301).
2. Remove the ignition switch lock cylinder (11582).
    1. Insert the ignition key into the ignition switch lock cylinder and turn to the RUN position.
    2. Insert a punch through the hole in the lower steering column shroud and push the ignition switch lock cylinder release tab while pulling out the ignition switch lock cylinder.

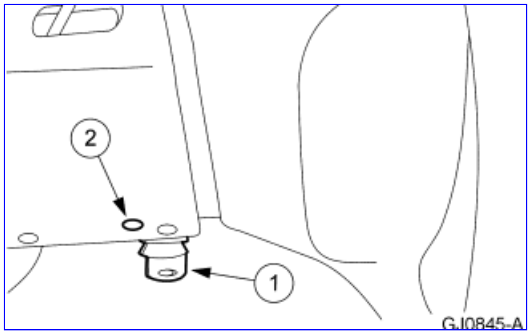

3. Twist the tilt wheel handle and shank (3F609) and remove.

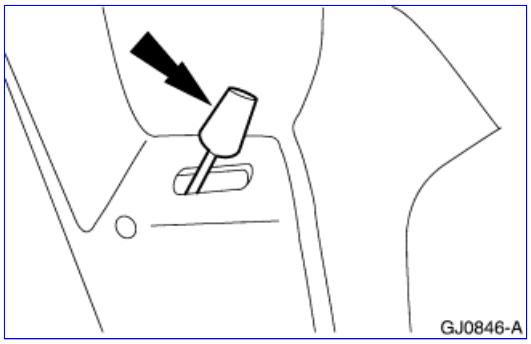

4. **NOTE:** Move gear selector to lowest position to access steering column opening cover.

   Release the four clips and remove the steering column opening cover.

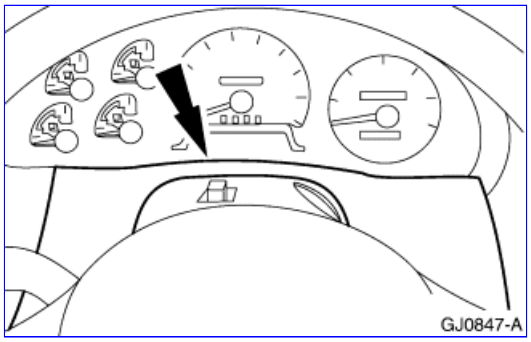

5. Remove the upper and lower steering column shrouds.
    1. Remove the three screws.
    2. Remove the lower steering column shroud.
    3. Remove the upper steering column shroud.

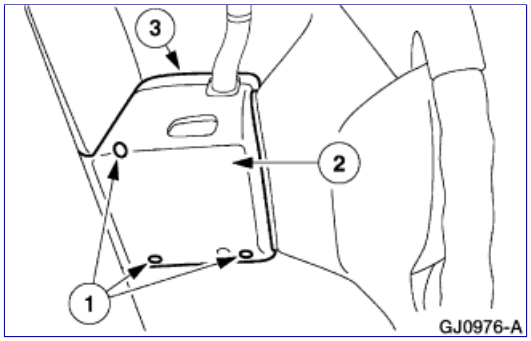

6. Remove the multi function switch.
    1. Remove the two screws.
    2. Disconnect the electrical connectors.
    3. Remove the multi function switch.

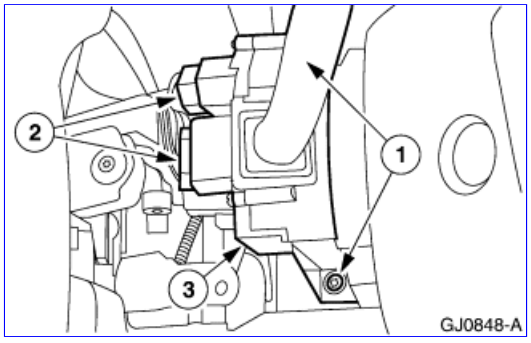

Installation

1. **NOTE:** When the battery (10655) is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven 16 km (10 mi) or more to relearn the strategy.

    To install, reverse the removal procedure.

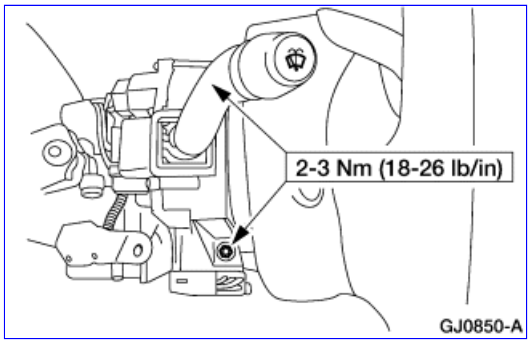

This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Copyright 2007 - 2013 Service Repair Solutions, Inc.