FUEL TANK PRESSURE SENSOR REPLACEMENT (ENGINE CONTROLS - 3.8L (L36 AND L67)) Document ID# 671533

Fuel Tank Pressure Sensor Replacement

Removal Procedure

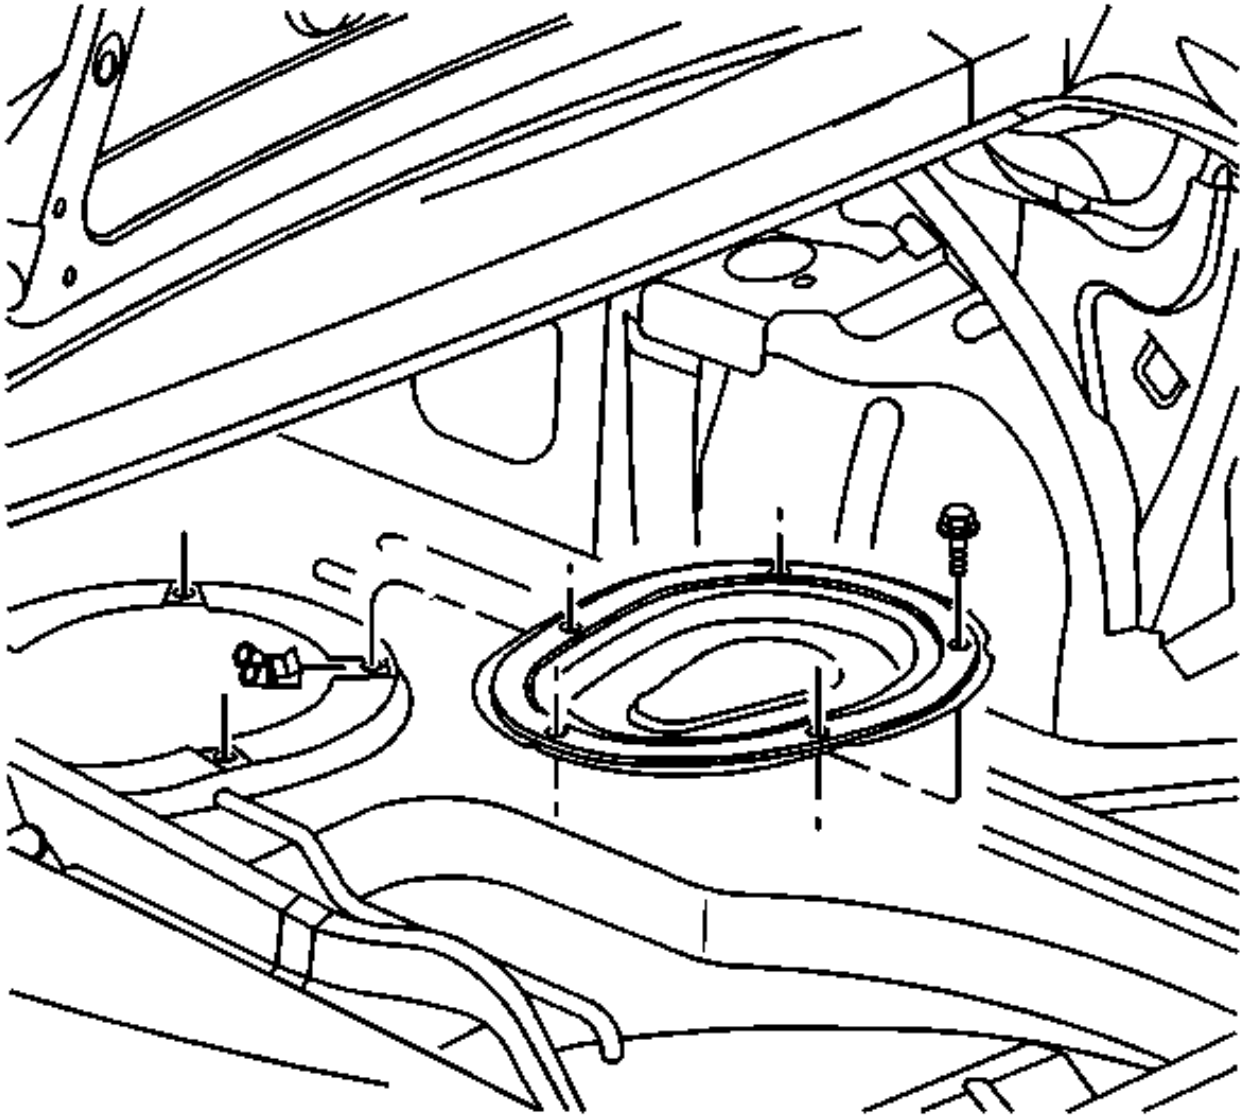

1. Remove the rear compartment floor trim.
2. Remove the fuel sender access panel bolts.
3. Remove the fuel sender access panel.

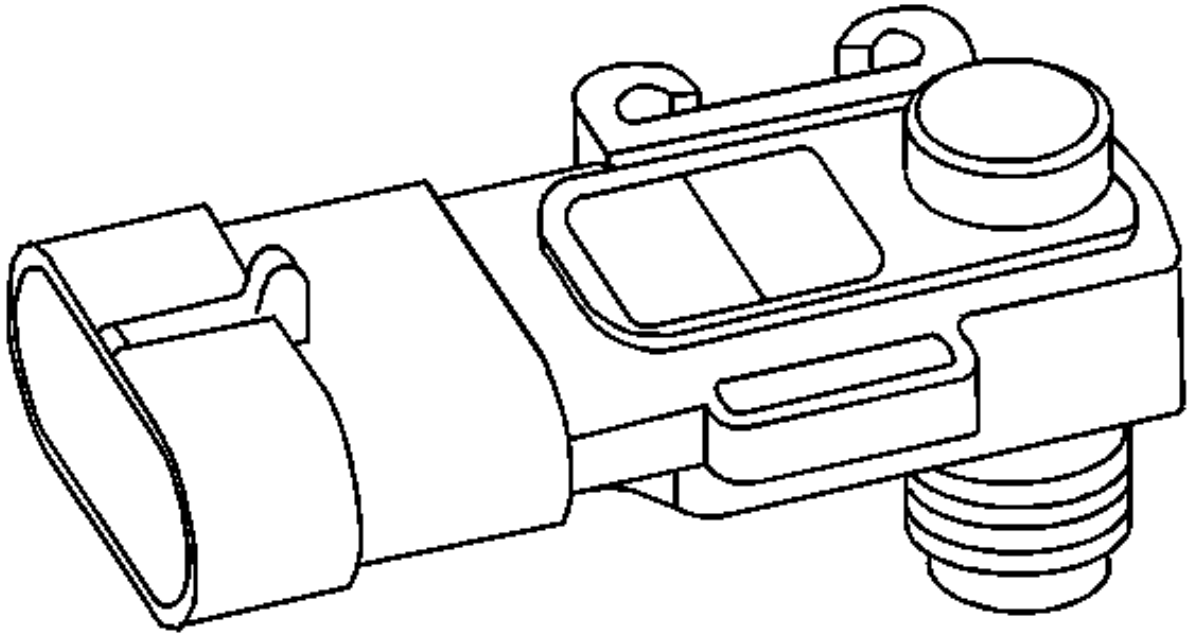

4. Disconnect the fuel tank pressure (FTP) sensor electrical connector.
5. Remove the FTP sensor.

Installation Procedure

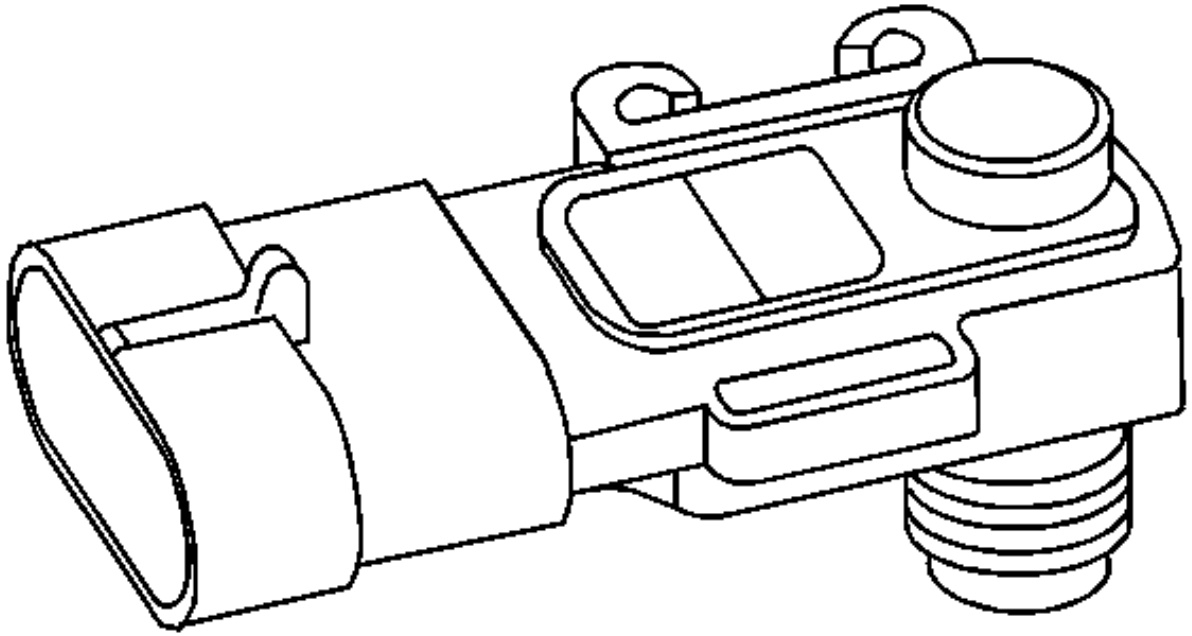

1. Install the FTP sensor.
2. Connect the FTP sensor electrical connector.

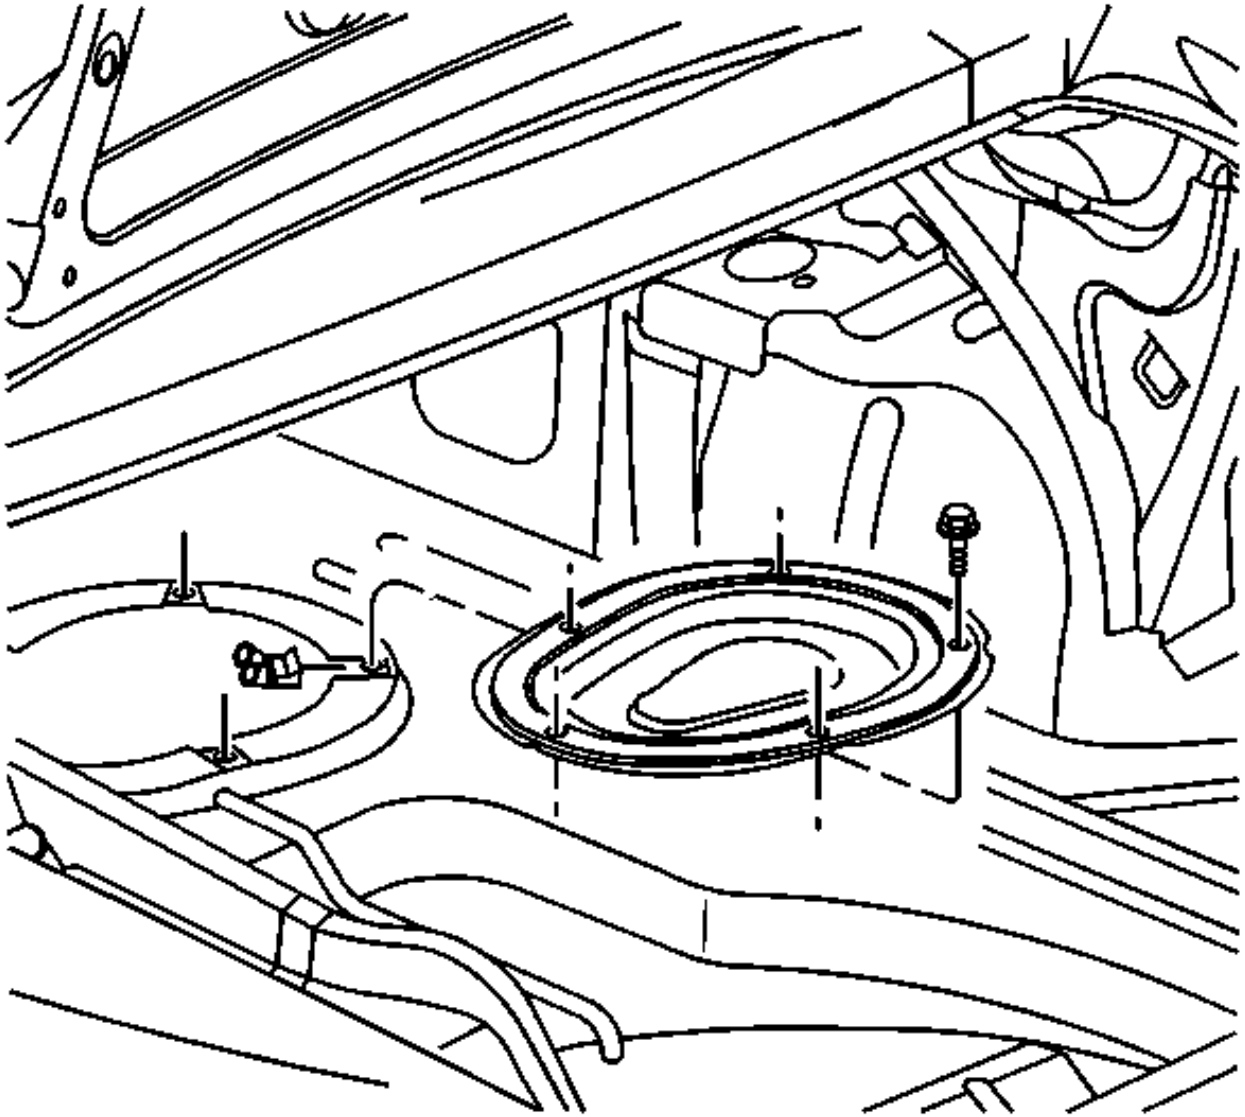

3. Install the fuel sender access panel.

Notice: Refer to Fastener Notice in Cautions and Notices.

4. Install the fuel sender access panel bolts.

   Tighten:

   Tighten the fuel sender access panel bolts to 2 [n-m] (18 lb in).

5. Install the rear compartment floor trim.

"Portions of materials contained herein have been reprinted with permission of General Motors Corporation, Service and Parts Operations" License Agreement #0410810.

Copyright 2007 - 2012 Service Repair Solutions, Inc.