REMOVAL

WARNING: Disable the airbag system before attempting any steering wheel, steering column or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable. Wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in possible serious or fatal injury.

NOTE: The heating-A/C system is equipped with two mode door actuators, one for the panel/floor-air door and one for the defrost-air door.

PANEL/FLOOR DOOR ACTUATOR

1. Disconnect and isolate the negative battery cable.
2. Remove the instrument panel from the vehicle (Refer to 23 - Body/Instrument Panel/PANEL, Instrument - Removal).
3. Remove the screws (1) that secure the panel/floor door actuator (2) to the back of the HVAC housing (3).
4. Remove the panel/floor door actuator from the HVAC housing and disconnect the HVAC wire harness connector (4) from the actuator.
5. Remove the panel/floor door actuator from the vehicle.

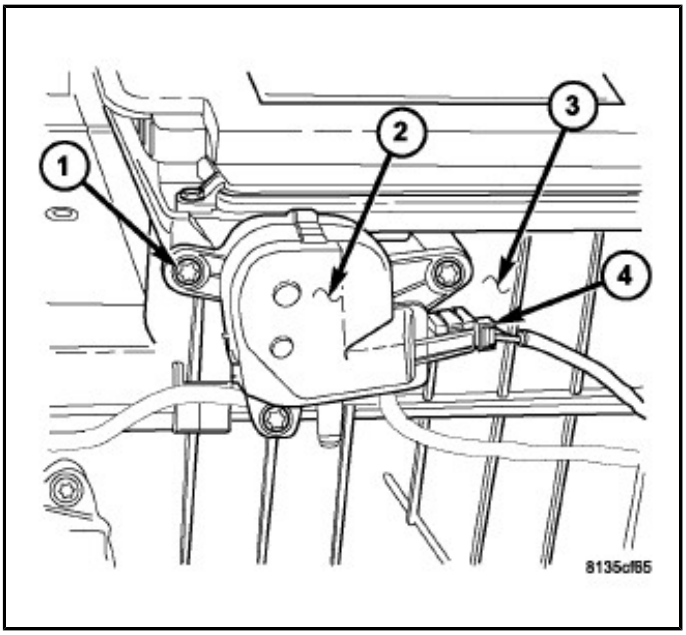

DEFROST DOOR ACTUATOR
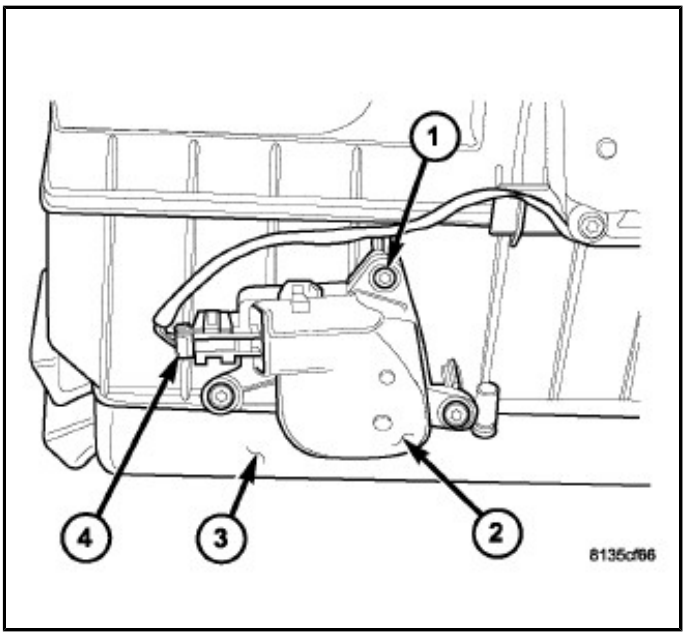
1. Disconnect and isolate the negative battery cable.
2. Remove the instrument panel from the vehicle (Refer to 23 - Body/Instrument Panel/PANEL, Instrument - Removal).
3. Remove the screws (1) that secure the defrost door actuator (2) to the back of the HVAC housing (3).
4. Remove the defrost door actuator from the HVAC housing and disconnect the HVAC wire harness connector (4) from the actuator.
5. Remove the defrost door actuator from the vehicle.