2000 Buick CENTURY

Submodel: LIMITED | **Engine Type:** V6 | **Liters:** 3.1
Fuel Delivery: FI | **Fuel:** GAS

Disabling the SIR System

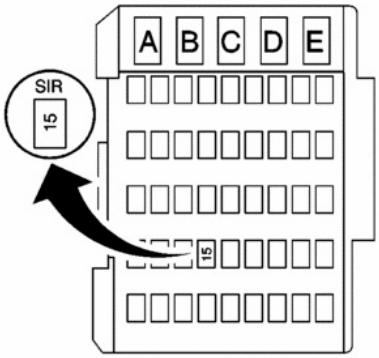

Click to Enlarge

1. Turn the steering wheel so that the vehicle's wheels are pointing straight ahead.
2. Turn the ignition switch to the OFF position.
3. Remove the key from the ignition switch.
4. Remove the IP fuse block access door.

Important

With the AIR BAG Fuse removed and the ignition switch in the RUN position, The AIR BAG warning lamp illuminates. This is normal operation, and does not indicate an SIR system malfunction.

5. Remove the AIR BAG Fuse from the fuse block.

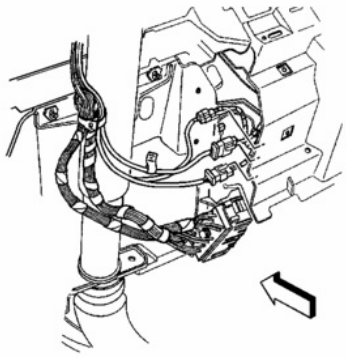

Click to Enlarge

6. Remove the left instrument panel insulator. Refer to Insulator Replacement - Instrument Panel (I/P) in Instrument Panel, Gauges and Console.
7. Remove the Connector Position Assurance (CPA) from the driver yellow 2-way connector located at the base of the steering column.

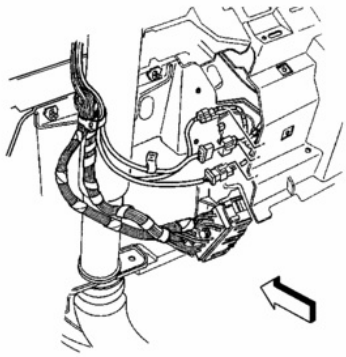

Click to Enlarge

8. Disconnect the driver yellow 2-way connector located at the base of the steering column.

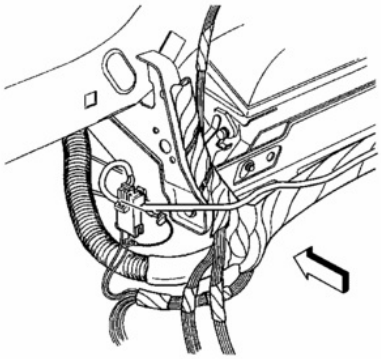

Click to Enlarge

9. Remove the Connector Position Assurance (CPA) from the passenger yellow 2-way connector located to the right of the steering column.

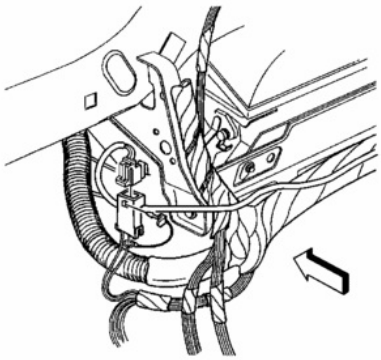

Click to Enlarge

10. Disconnect the passenger yellow 2-way connector located to the right of the steering column.

Important

Perform steps 11 - 12 if the vehicle is equipped with a driver side air bag.

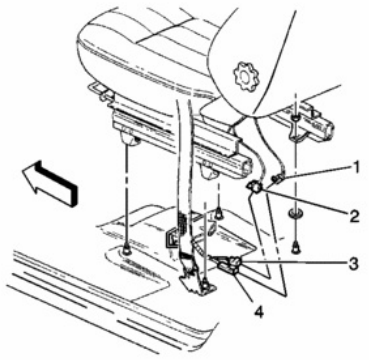

Click to Enlarge

11. Move the driver seat back as far as possible to gain access to the driver side air bag yellow 2-way connector.
12. Disconnect the driver side air bag yellow 2-way connector.