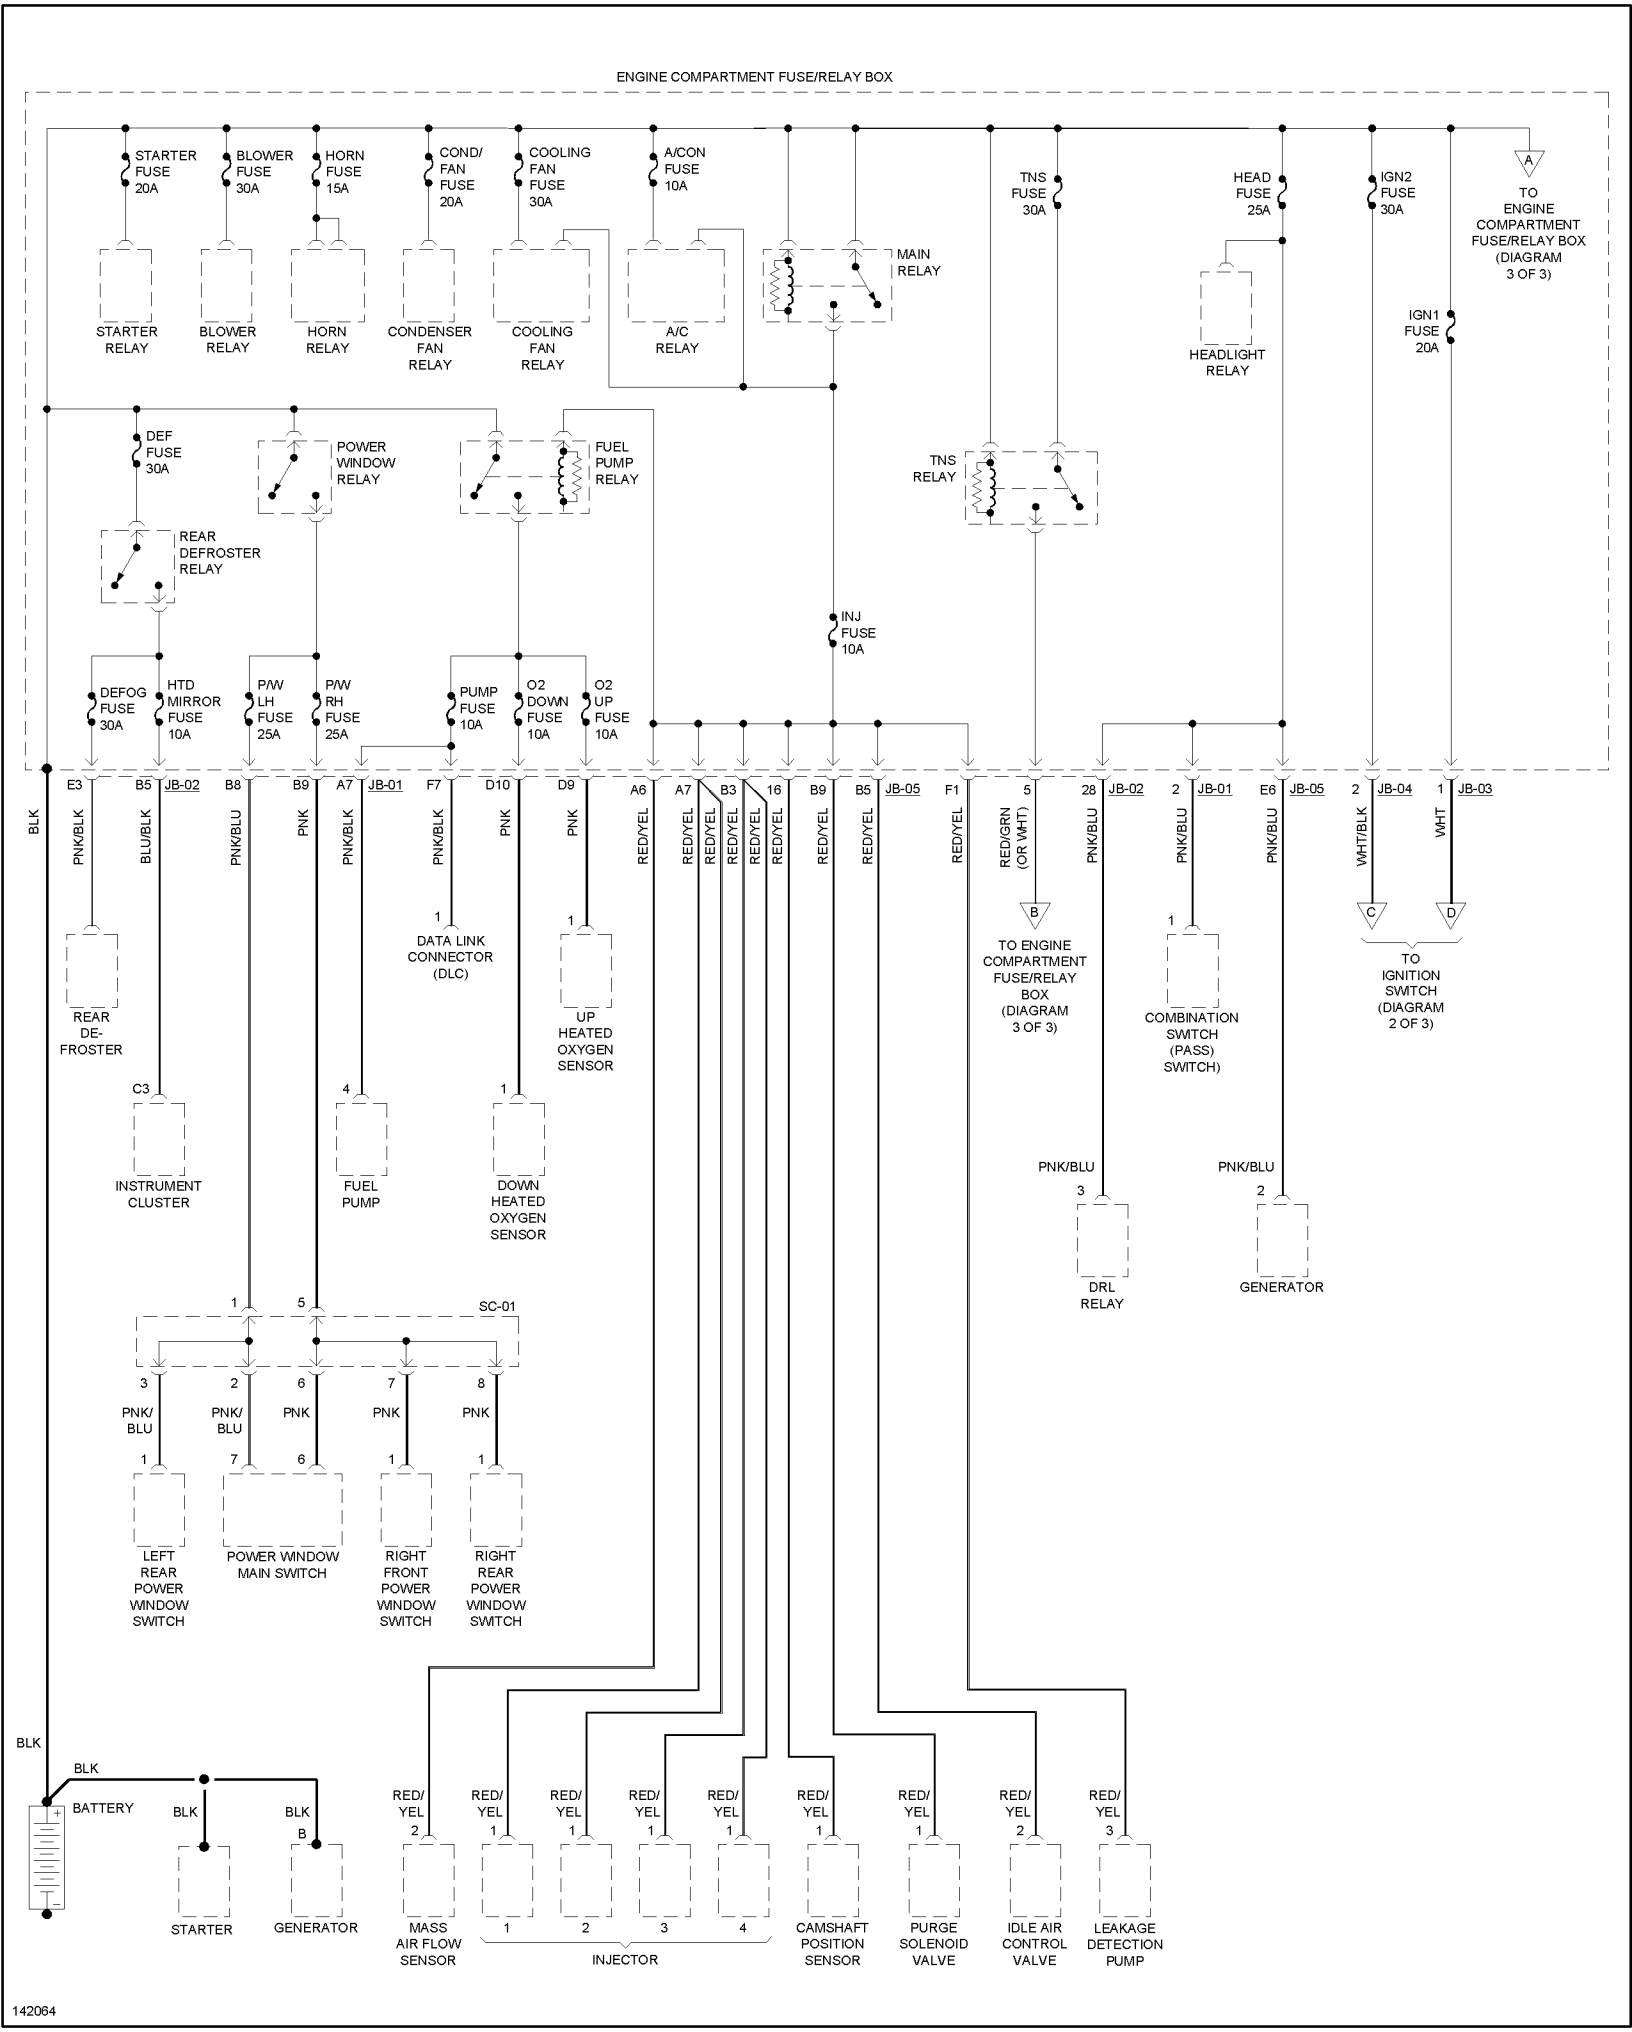
ENGINE COMPARTMENT FUSE/RELAY BOX
STARTER FUSE 20A
BLOWER FUSE 30A
HORN FUSE 15A
COND/ FAN FUSE 20A
COOLING FAN FUSE 30A
A/CON FUSE 10A
TNS FUSE 30A
HEAD FUSE 25A
IGN2 FUSE 30A
IGN1 FUSE 20A
TO ENGINE COMPARTMENT FUSE/RELAY BOX (DIAGRAM 3 OF 3)
STARTER RELAY
BLOWER RELAY
HORN RELAY
CONDENSER FAN RELAY
COOLING FAN RELAY
A/C RELAY
MAIN RELAY
HEADLIGHT RELAY
DEF FUSE 30A
POWER WINDOW RELAY
FUEL PUMP RELAY
TNS RELAY
REAR DEFROSTER RELAY
INJ FUSE 10A
DEFOG FUSE 30A
HTD MIRROR FUSE 10A
P/W LH FUSE 25A
P/W RH FUSE 25A
PUMP FUSE 10A
O2 DOWN FUSE 10A
O2 UP FUSE 10A
BLK
E3 PNK/BLK
B5 BLU/BLK
JB-02
B8 PNK/BLU
B9 PNK
A7 PNK/BLK
JB-01
F7 PNK/BLK
D10 PNK
D9 PNK
A6 RED/YEL
A7 RED/YEL
B3 RED/YEL
16 RED/YEL
B9 RED/YEL
B5 RED/YEL
JB-05
F1 RED/YEL
5 RED/GRN (OR WHT)
28 PNK/BLU
JB-02
2 PNK/BLU
JB-01
E6 PNK/BLU
JB-05
2 WHT/BLK
JB-04
1 WHT
JB-03
REAR DE-FROSTER
DATA LINK CONNECTOR (DLC)
UP HEATED OXYGEN SENSOR
TO ENGINE COMPARTMENT FUSE/RELAY BOX (DIAGRAM 3 OF 3)
COMBINATION SWITCH (PASS) SWITCH)
TO IGNITION SWITCH (DIAGRAM 2 OF 3)
C3
INSTRUMENT CLUSTER
FUEL PUMP
DOWN HEATED OXYGEN SENSOR
PNK/BLU
DRL RELAY
PNK/BLU
GENERATOR
SC-01
PNK/ BLU
PNK/ BLU
PNK
PNK
PNK
LEFT REAR POWER WINDOW SWITCH
POWER WINDOW MAIN SWITCH
RIGHT FRONT POWER WINDOW SWITCH
RIGHT REAR POWER WINDOW SWITCH
BLK
BLK
BATTERY
BLK
BLK
STARTER
GENERATOR
RED/ YEL
MASS AIR FLOW SENSOR
INJECTOR
CAMSHAFT POSITION SENSOR
PURGE SOLENOID VALVE
IDLE AIR CONTROL VALVE
LEAKAGE DETECTION PUMP
142064