Menu | Circuit Index

Fuse/Relay Boxes

- Under-hood Fuse/Relay Box

Fuse-to-Components Index

Relay control module

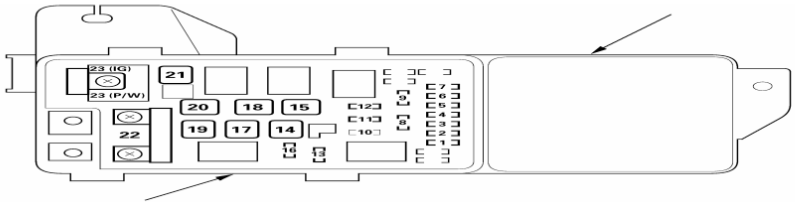

Under-hood Fuse/Relay Box

Fuse Number	Fuse Name	Amps	Page	Component or Circuit Protected
1	L-H/L LO	10A	10-4	Left low beam headlight
2	RR DEFROSTER COIL	30A	10-12	Relay control module (EX-L)
3	L-H/L HI	10A	10-4	Left high beam headlight
4	SMALL LIGHT	15A	10-4	Taillight relay
5	R-H/L HI	10A	10-4	Right high beam headlight
6	R-H/L LO	10A	10-4	Right low beam headlight
7	BACK UP	7.5A	10-2	Relay control module
8	FI ECU	15A	10-2	PGM-FI main relay 1, DLC
9	CONDENSER FAN	20A	10	Condenser fan relay
10	OPTION	20A	10	Fog lights
11	COOLING FAN	20A (L4) 30A (V6)	10	Radiator fan relay
12	MG CLUTCH	7.5A	10	A/C compressor clutch relay
13	HORN, STOP	20A	10-1	Brake pedal position switch, Horn relay, Ignition key switch/key light
14	RR DEFROSTER	40A	10-2	Rear window defogger relay
15	BACK UP, ACC	40A	10-2	Fuse 7 in under-hood fuse/relay box, Fuses 5 , 6, 7, 8, and 9 in under-dash fuse/relay box
16	HAZARD	15A	10-1	Hazard warning switch, Turn signal/hazard relay
17	ABS MOTOR (L4) TCS MOTOR (V6)	30A	10-1	ABS modulator-control unit (L4), ABS/TCS modulator-control unit (V6)
18	ABS F/S (L4) TCS (V6)	20A (L4) 40A (V6)	10-1	ABS modulator-control unit (L4), ABS/TCS modulator-control unit (V6)
19	OPTION	40A	10	Fuses 1, 2, 3, and 4 in under-dash fuse/relay box
20	OPTION	40A	10	Fuses 12, 13, 14, 15, 16, and 17 in under-dash fuse/relay box
21	HEATER MOTOR	40A	10-2	Blower motor relay
22	—	—	10	Not used
22	BATTERY	100A	10	Battery, Power distribution
23	B IG1 MAIN	50A	10-3	Fuse 33 in under-dash fuse/relay box, Ignition switch
23	POWER WINDOW	50A	10-3	Fuses 27 and 28 in under-dash fuse/relay box, Power window relay

2005 American Honda Motor Co., Inc.