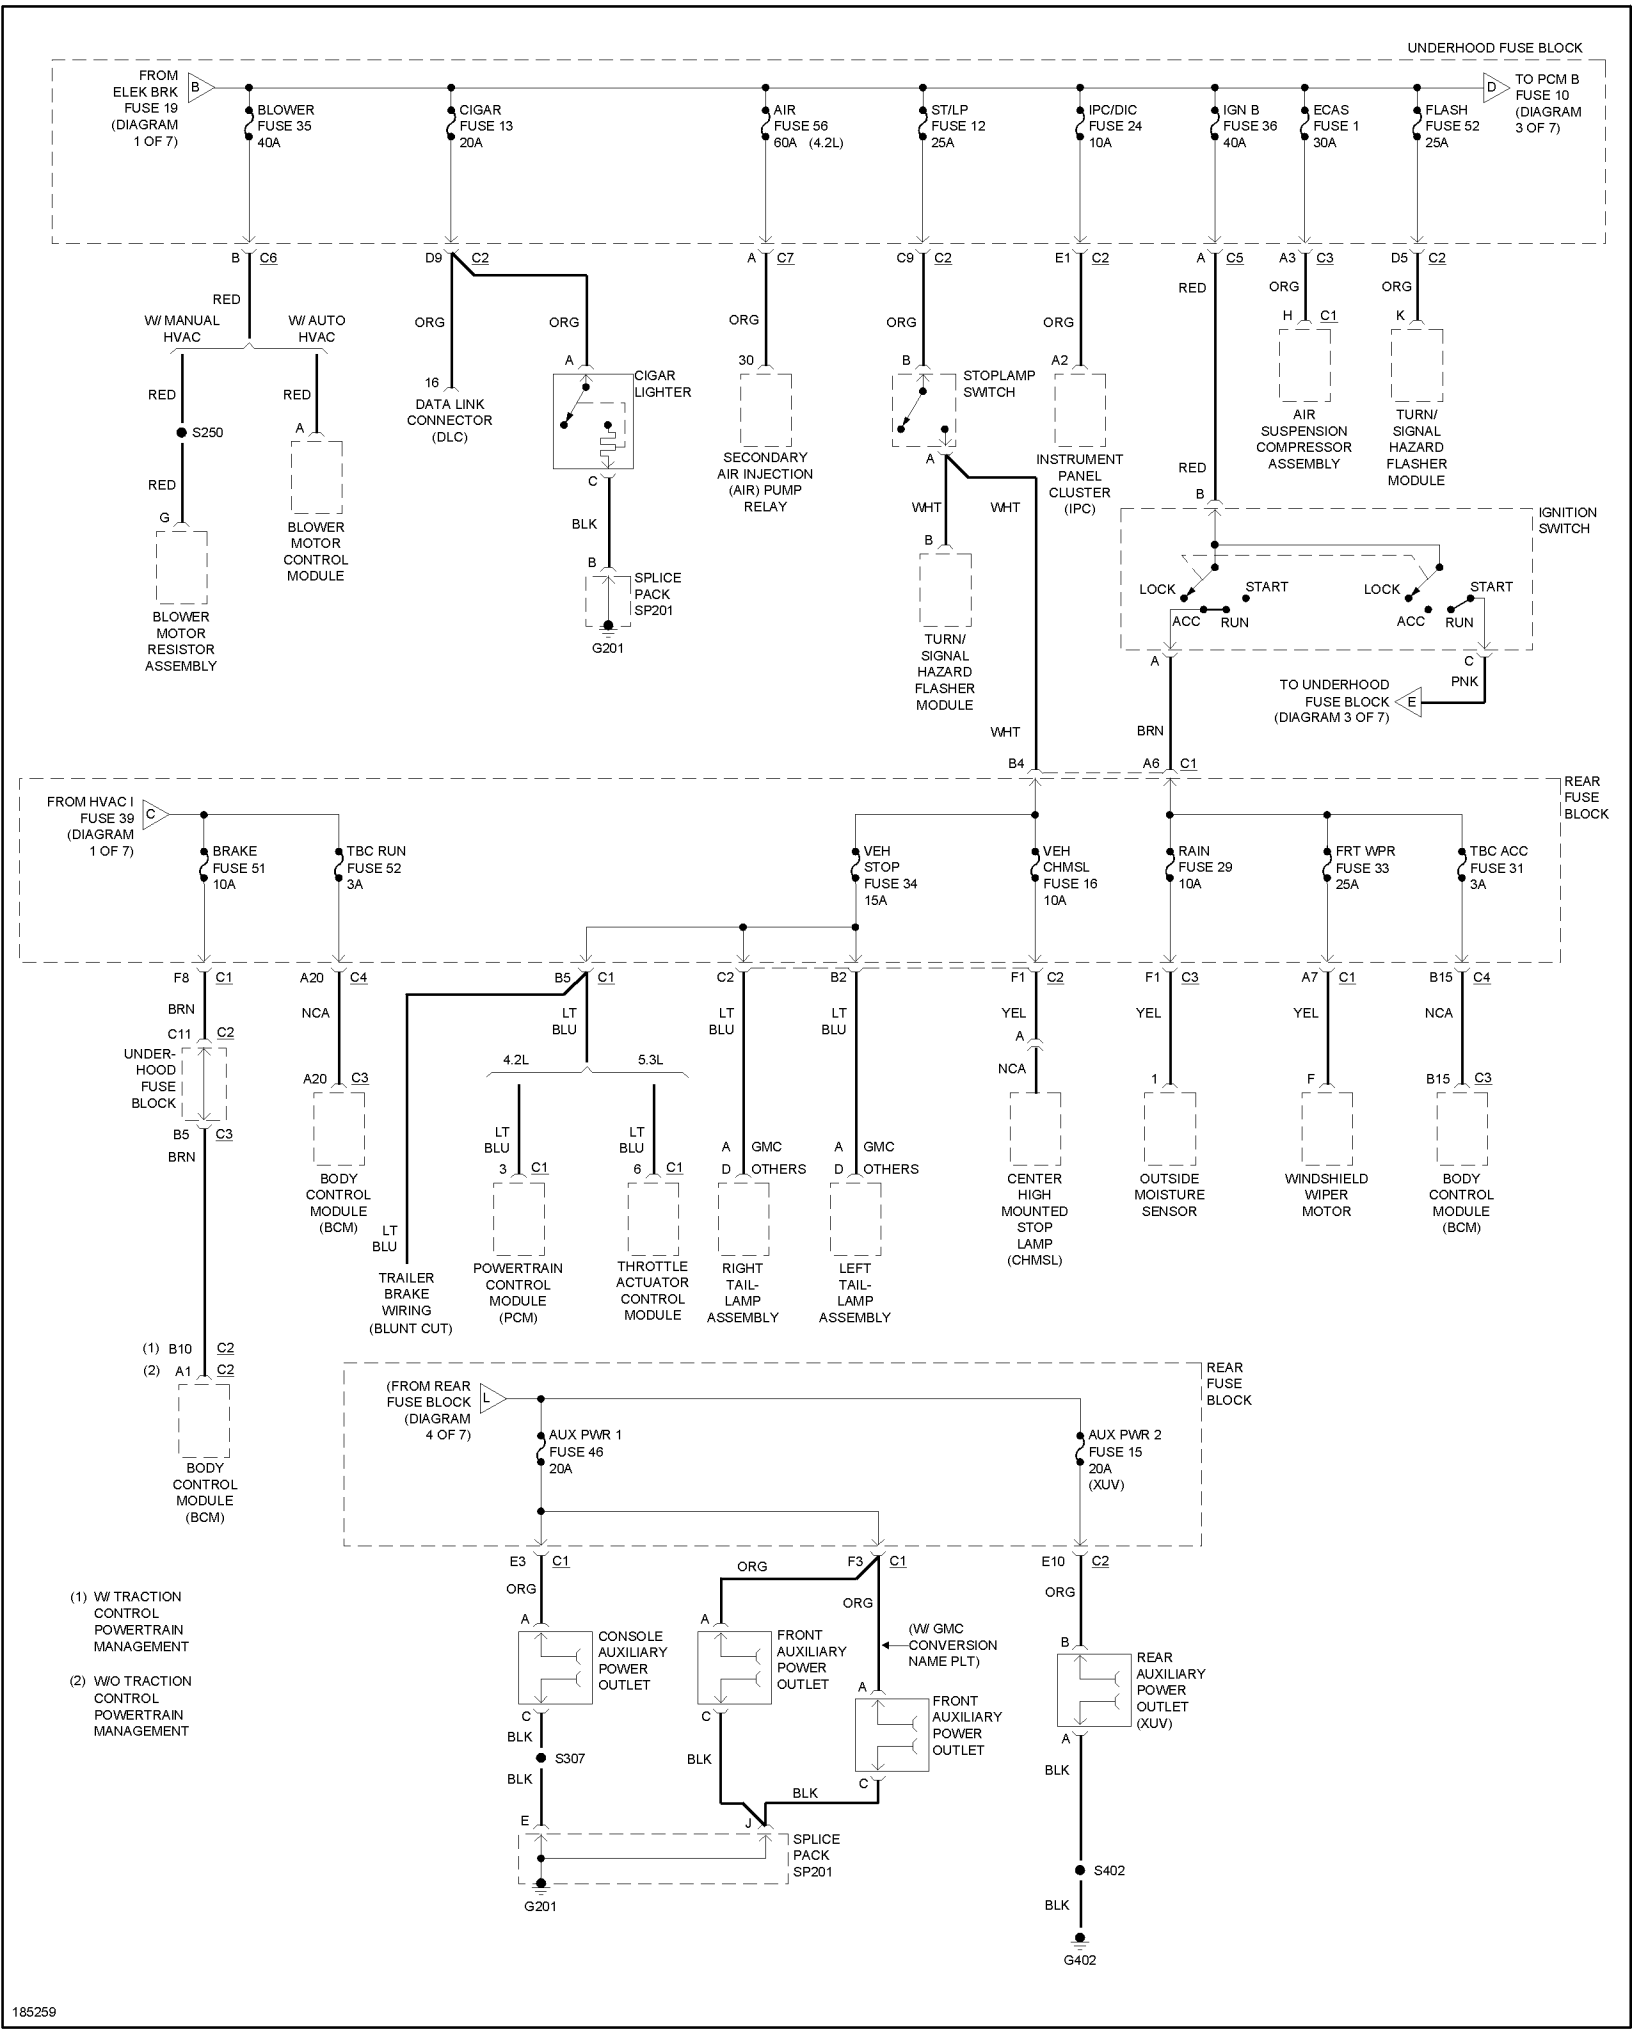
UNDERHOOD FUSE BLOCK
FROM ELEK BRK FUSE 19 (DIAGRAM 1 OF 7)
BLOWER FUSE 35 40A
CIGAR FUSE 13 20A
AIR FUSE 56 60A (4.2L)
ST/LP FUSE 12 25A
IPC/DIC FUSE 24 10A
IGN B FUSE 36 40A
ECAS FUSE 1 30A
FLASH FUSE 52 25A
TO PCM B FUSE 10 (DIAGRAM 3 OF 7)
W/ MANUAL HVAC
W/ AUTO HVAC
S250
BLOWER MOTOR RESISTOR ASSEMBLY
BLOWER MOTOR CONTROL MODULE
16 DATA LINK CONNECTOR (DLC)
CIGAR LIGHTER
SPLICE PACK SP201
G201
SECONDARY AIR INJECTION (AIR) PUMP RELAY
STOPLAMP SWITCH
TURN/ SIGNAL HAZARD FLASHER MODULE
INSTRUMENT PANEL CLUSTER (IPC)
AIR SUSPENSION COMPRESSOR ASSEMBLY
TURN/ SIGNAL HAZARD FLASHER MODULE
IGNITION SWITCH
LOCK
START
ACC
RUN
TO UNDERHOOD FUSE BLOCK (DIAGRAM 3 OF 7)
REAR FUSE BLOCK
FROM HVAC I FUSE 39 (DIAGRAM 1 OF 7)
BRAKE FUSE 51 10A
TBC RUN FUSE 52 3A
VEH STOP FUSE 34 15A
VEH CHMSL FUSE 16 10A
RAIN FUSE 29 10A
FRT WPR FUSE 33 25A
TBC ACC FUSE 31 3A
UNDER-HOOD FUSE BLOCK
BODY CONTROL MODULE (BCM)
TRAILER BRAKE WIRING (BLUNT CUT)
4.2L
5.3L
POWERTRAIN CONTROL MODULE (PCM)
THROTTLE ACTUATOR CONTROL MODULE
RIGHT TAIL-LAMP ASSEMBLY
LEFT TAIL-LAMP ASSEMBLY
GMC
OTHERS
CENTER HIGH MOUNTED STOP LAMP (CHMSL)
OUTSIDE MOISTURE SENSOR
WINDSHIELD WIPER MOTOR
BODY CONTROL MODULE (BCM)
(1) B10 C2
(2) A1 C2
BODY CONTROL MODULE (BCM)
(FROM REAR FUSE BLOCK (DIAGRAM 4 OF 7)
AUX PWR 1 FUSE 46 20A
AUX PWR 2 FUSE 15 20A (XUV)
CONSOLE AUXILIARY POWER OUTLET
FRONT AUXILIARY POWER OUTLET
(W/ GMC CONVERSION NAME PLT)
FRONT AUXILIARY POWER OUTLET
REAR AUXILIARY POWER OUTLET (XUV)
S307
S402
G402
SPLICE PACK SP201
(1) W/ TRACTION CONTROL POWERTRAIN MANAGEMENT
(2) W/O TRACTION CONTROL POWERTRAIN MANAGEMENT
185259