2010 Chrysler Truck Town & Country V6-3.8L

INSTALLATION

NOTE: Left side shown in illustrations. Right side similar.

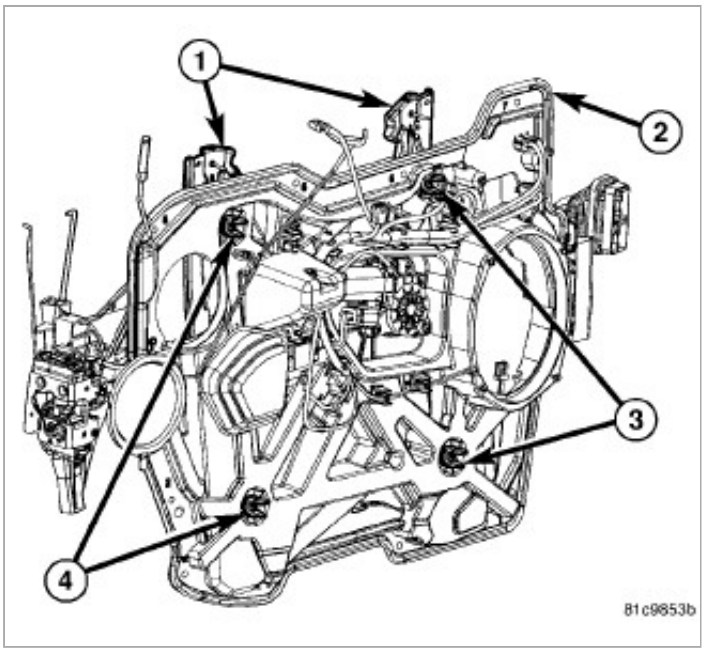

1. If servicing the window regulator, position the window regulator rails (1) to the carrier plate (2) and install the four retaining screws (3 and 4). Tighten the screws to 9 Nm (80 in. lbs.).
2. Install the carrier plate See: Front Door\Service and Repair\Front Door Carrier Plate - Installation.

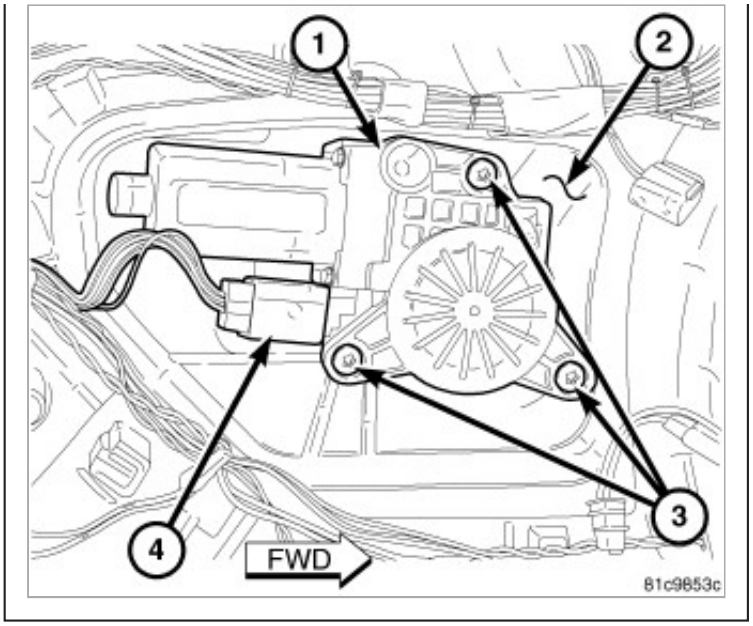

3. Install the window regulator motor (1) onto the carrier plate (2). If necessary, rotate the motor slightly to align the splines on the motor with the window regulator linkage.
4. Install the three screws (3) that secure the window regulator motor to the carrier plate. Tighten the screws to 2.8 Nm (25 in. lbs.).
5. Connect the wire harness connector (4) to the window regulator motor.
6. Install the front door trim panel See: Front Door Panel\Service and Repair\Front Door Trim Panel - Installation.